


Enervex RSHT Chimney Fans

Capacitor Wiring Diagram

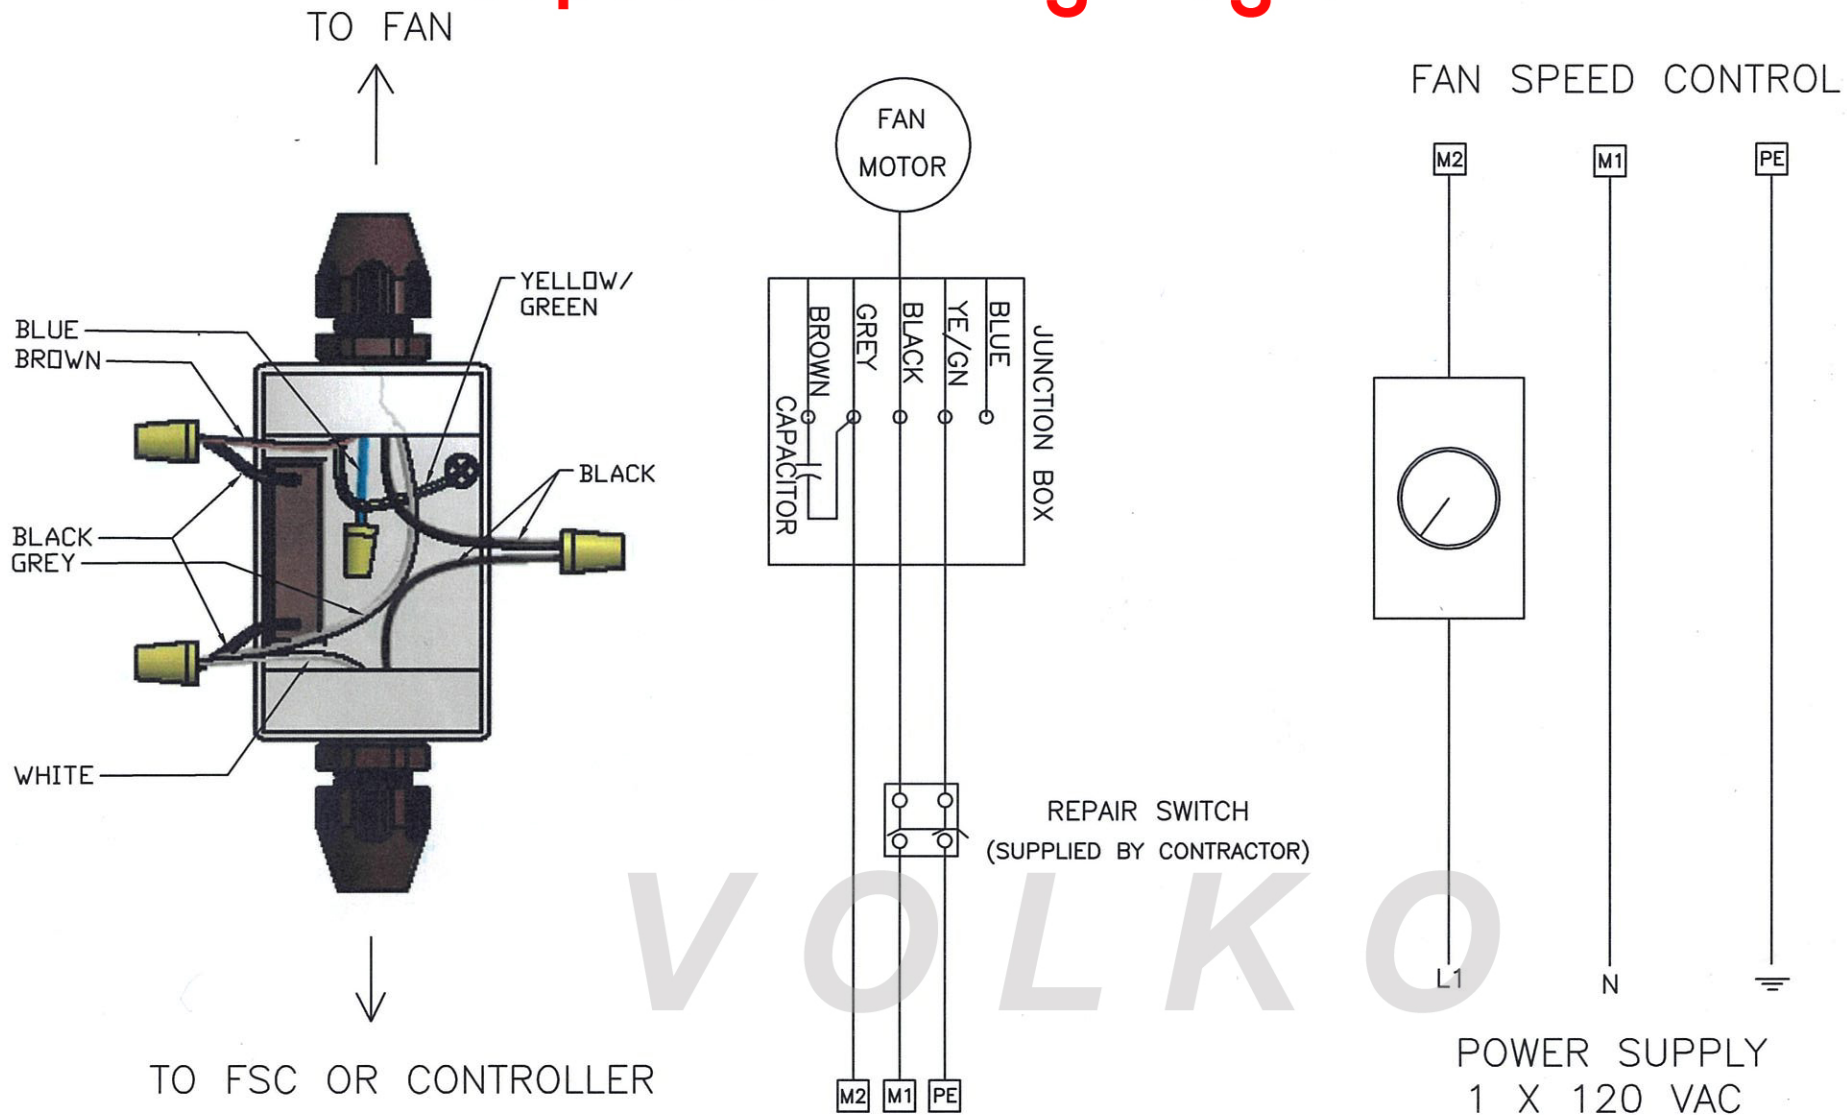

DO NOT DISCARD JUNCTION BOX—
CAPACITOR INSIDE

— Factory Wired
+ Not Connected

---- Field Wiring
○ Wire Nut

ENERVEX®
GREEN BEFORE GREEN WAS IN

1685 Bluegrass Lakes Pkwy
Alpharetta, GA 30004
(770)587-3238
Fax (770)587-4731

RSHT WIRING DIAGRAM